



SOUND CHARTS

AIRFLOW VS. NC (WITH OBD/MULTILOUVER)

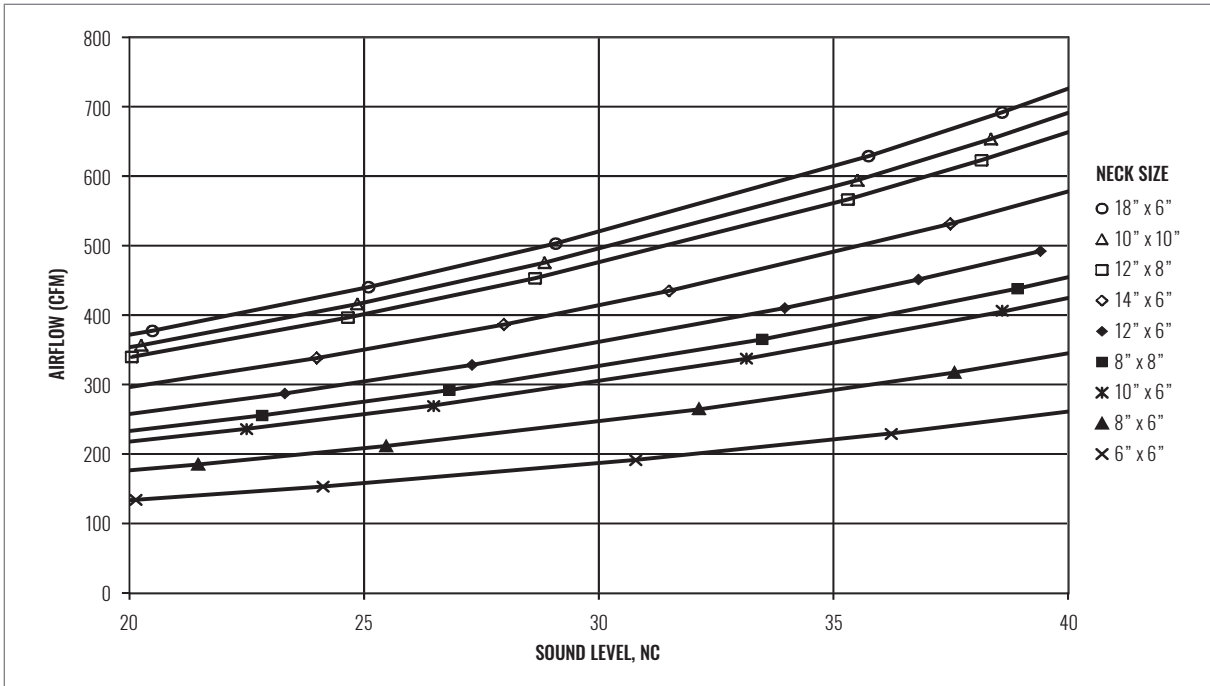


AIRFLOW VS. NC (WITH OBD/MULTILOUVER)

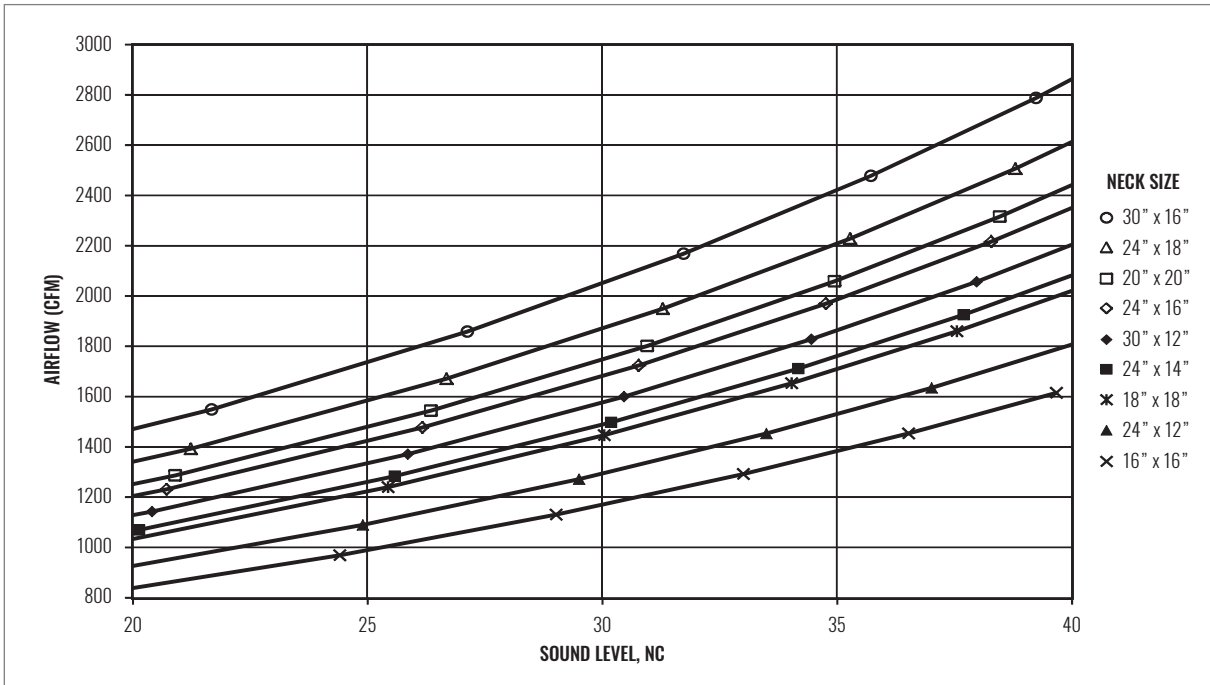


NOTES: Charts are at 20 BTUH/ft² loads. See the Engineering section of this catalog for instructions on how to read these charts and additional ADPI information.

SOUND CHARTS

AIRFLOW VS. NC (WITH OBD/MULTILOUVER)

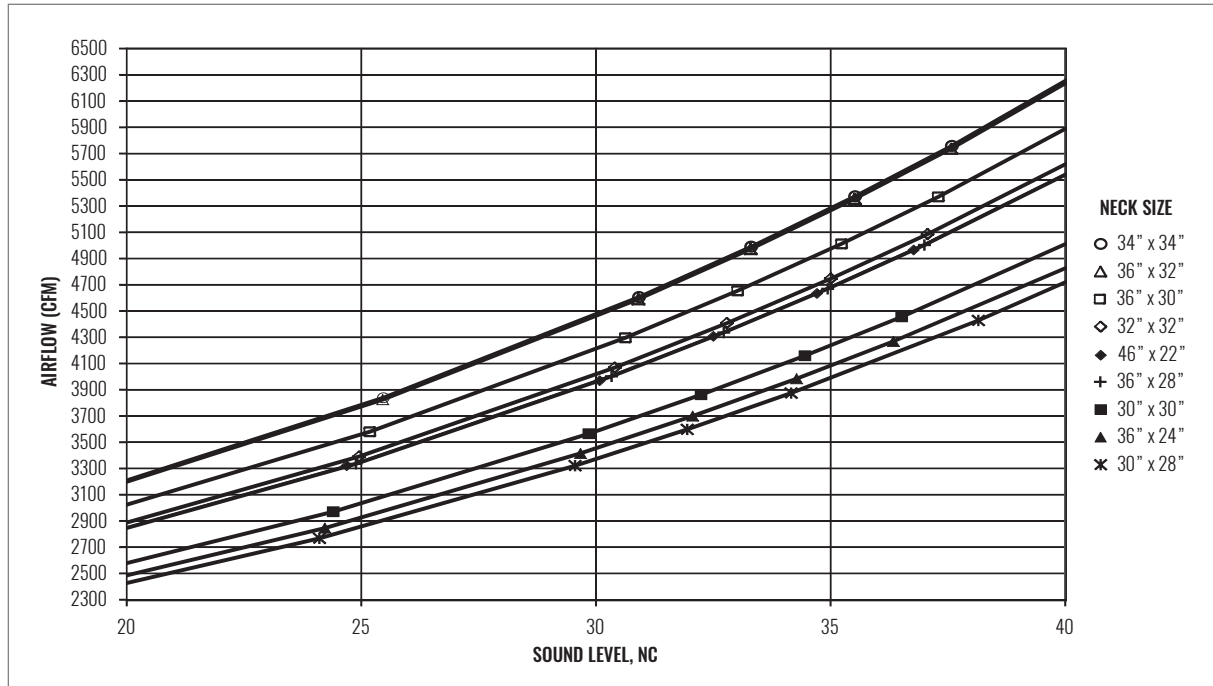

AIRFLOW VS. NC (WITH OBD/MULTILOUVER)

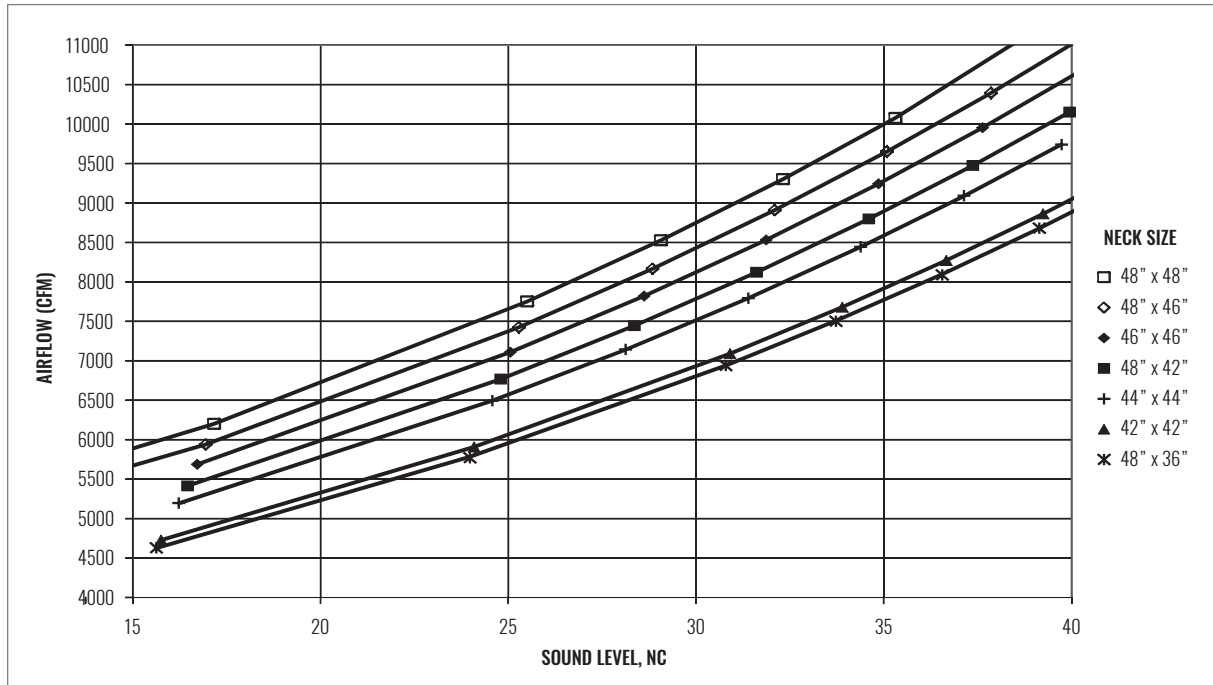

NOTES: Charts are at 20 BTUH/ft² loads. See the Engineering section of this catalog for instructions on how to read these charts and additional ADPI information.